


NODE 1 INTERNAL LIGHT LOCATIONS

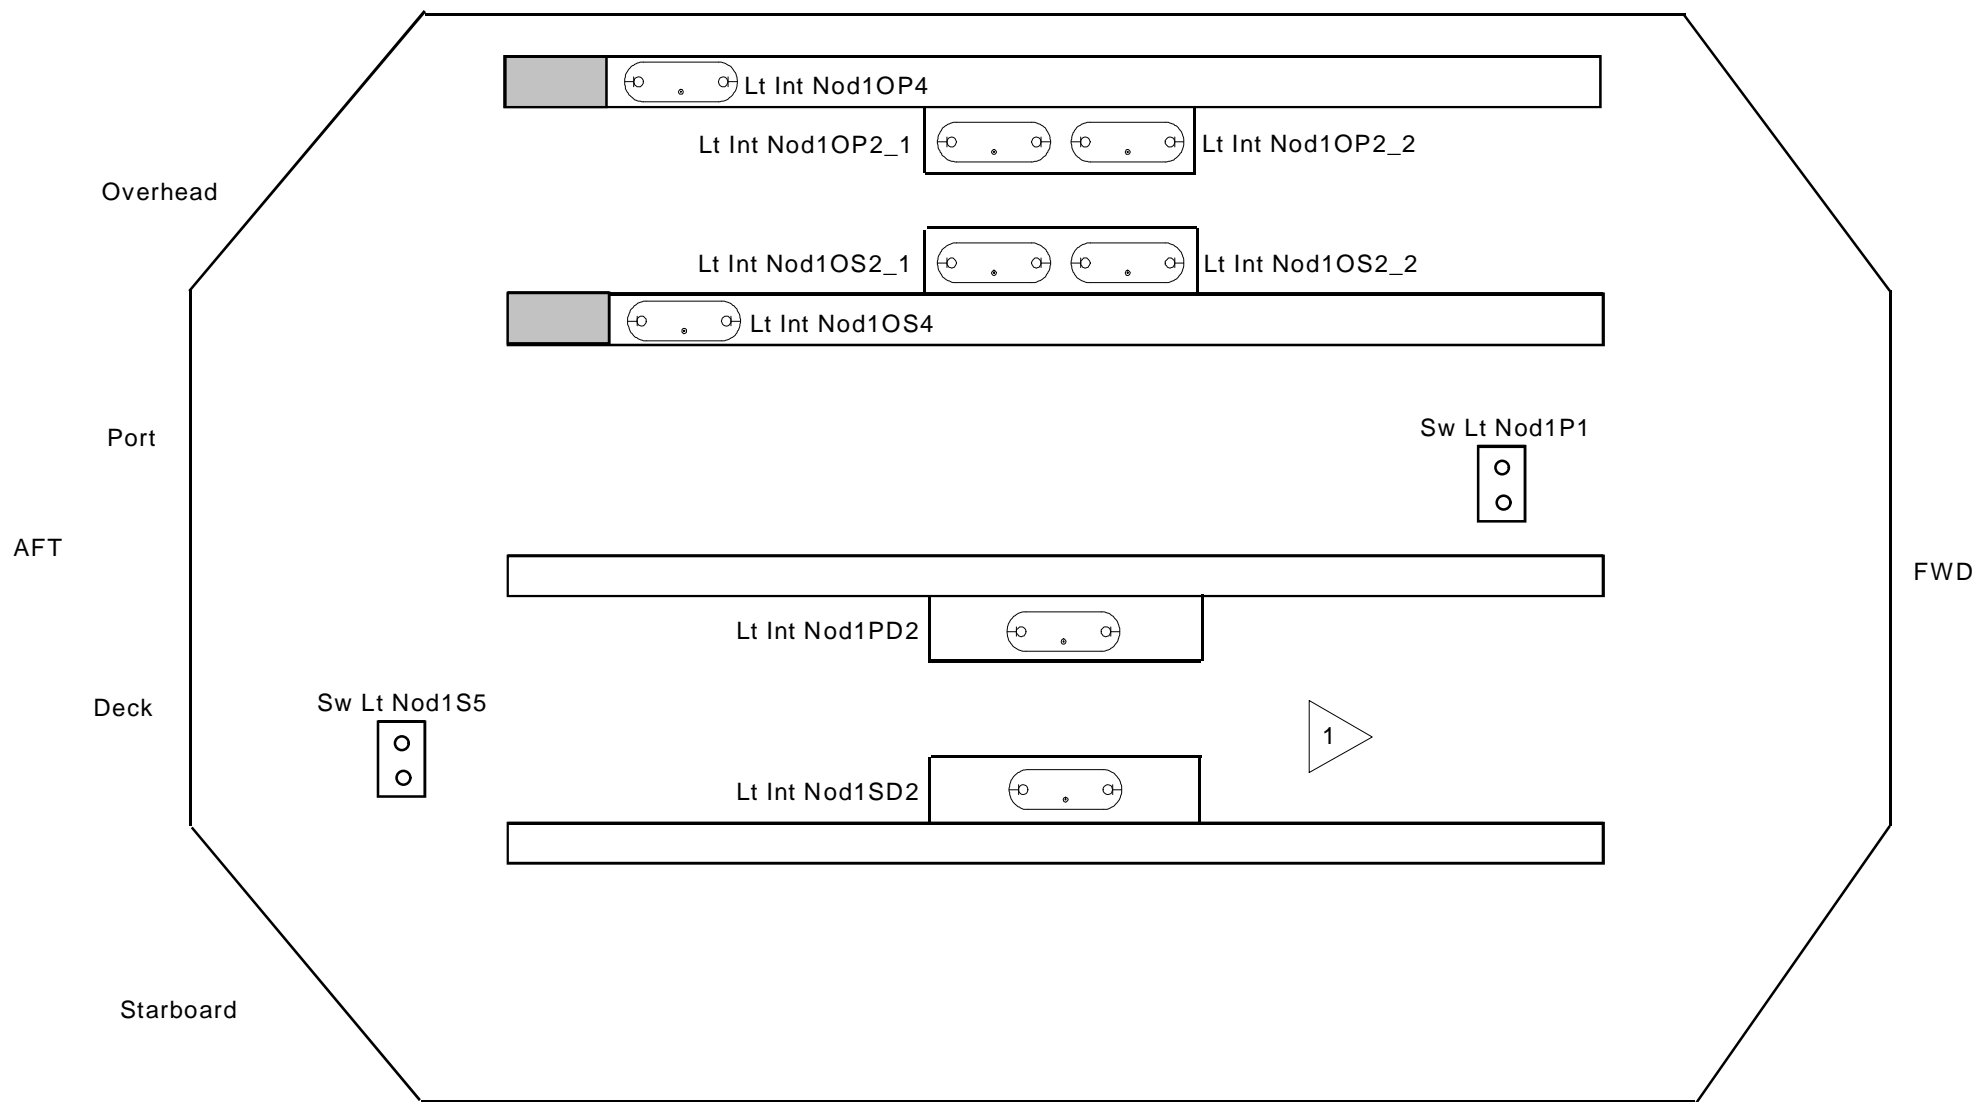

1 The Sw Lt Int Nod1D2 master switch is not shown on this drawing, it is located on the Deck hatch near the starboard side

This Page Intentionally Blank